
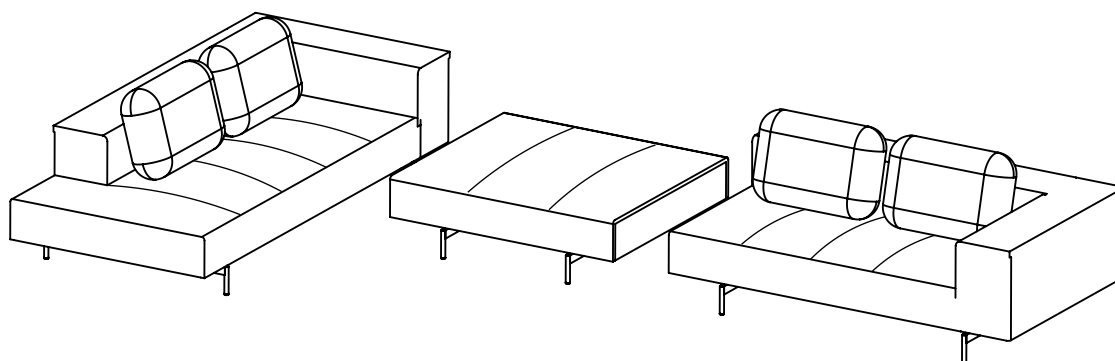
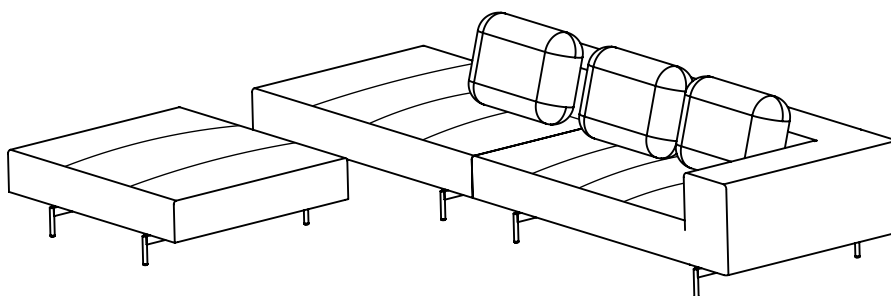


Amsterdam


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Examples

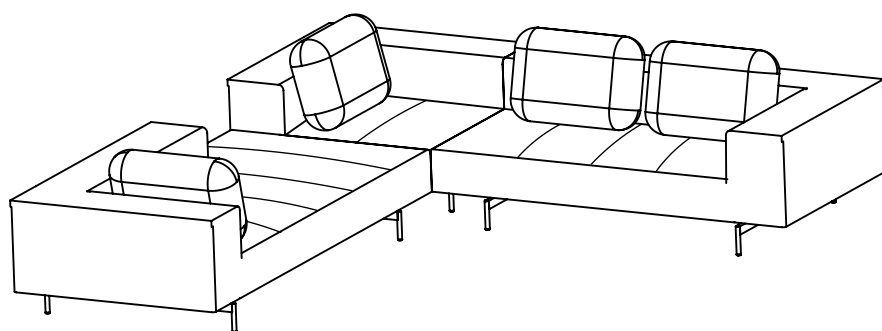

Fittings

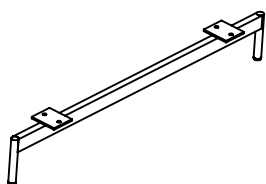


A:

Amsterdam leg




B:

Screw M8x60 mm




C:

Allen key 5 mm



D:

Black wooden block

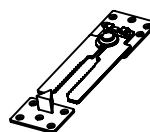

E:

Connector



F:

Woodscrew
3,5x20 mm



G:

Woodscrew
5x20 mm


Amsterdam

Design by BoConcept



Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

SOLO modules


0100

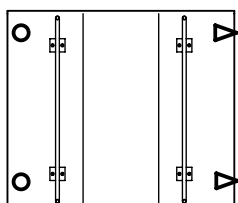


5000

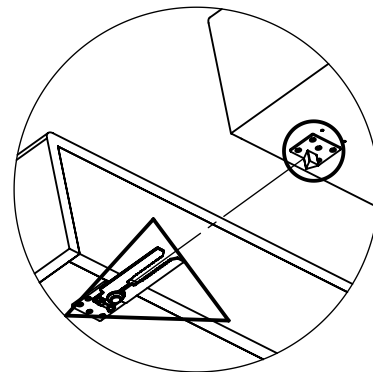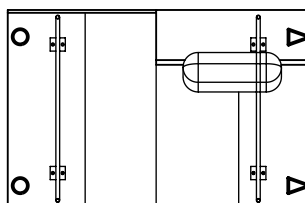


2502

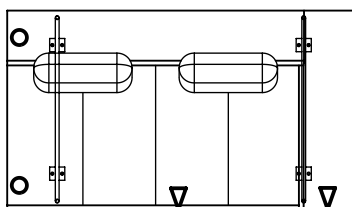


2503

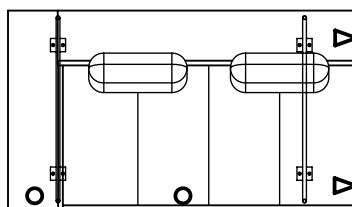


5500

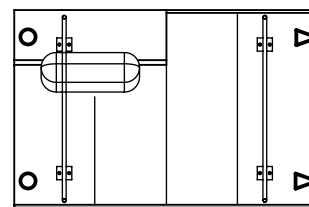


8000

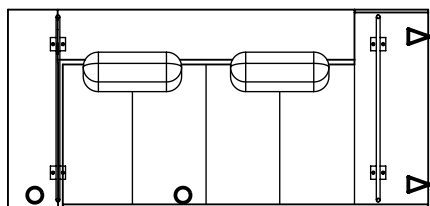


8500

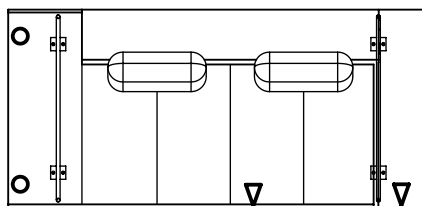


6000

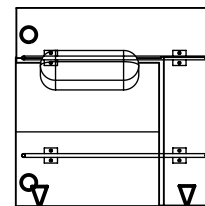


8100

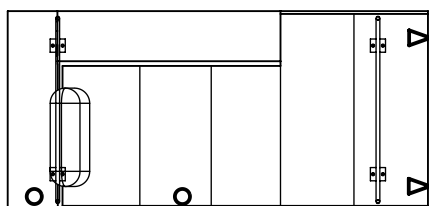

8600

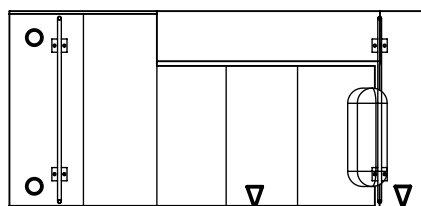

6500

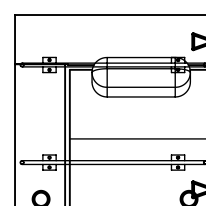


Amsterdam


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Step 1:

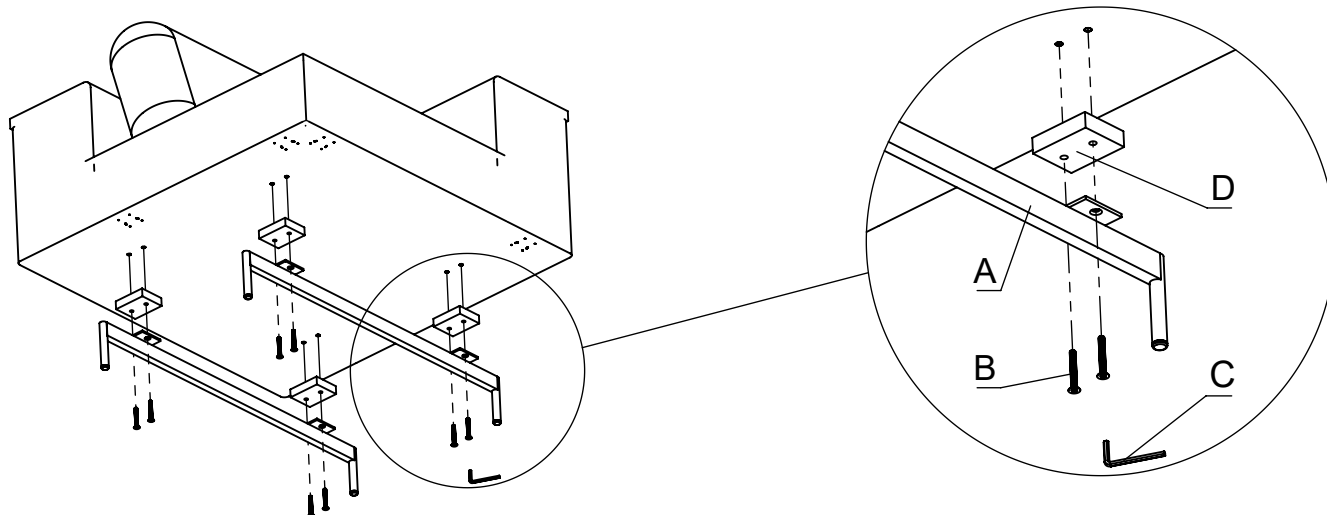

Step 2:

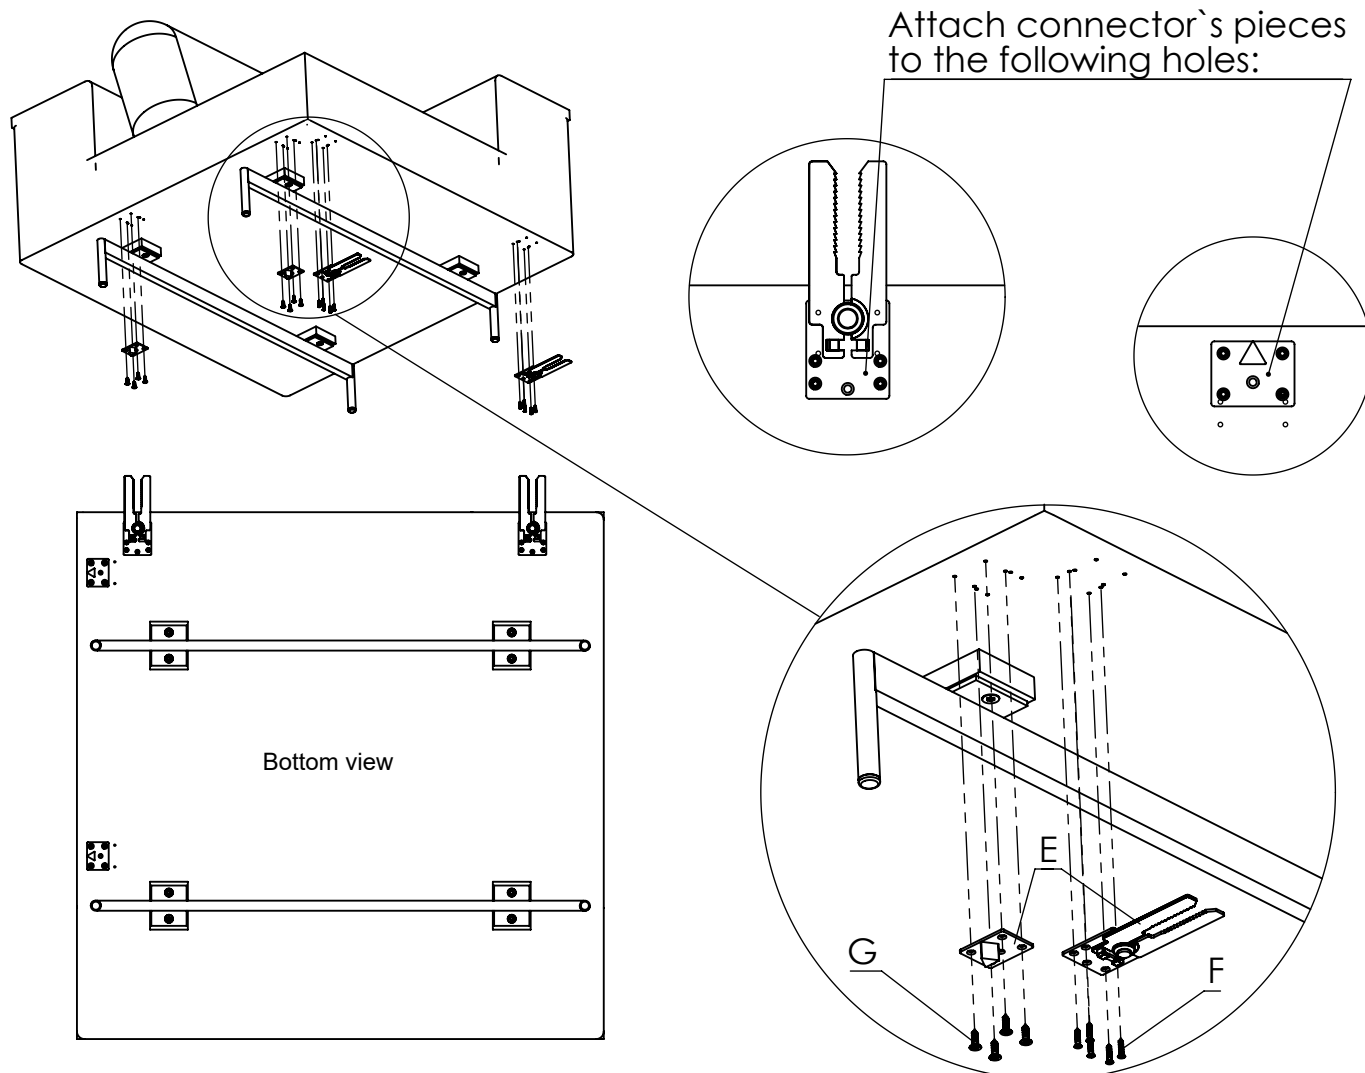

Amsterdam

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Step 3:

